


GT Series

Quick Operation Guide

This guide refers to a default GT43.
Your GT configuration may differ.



Switch On

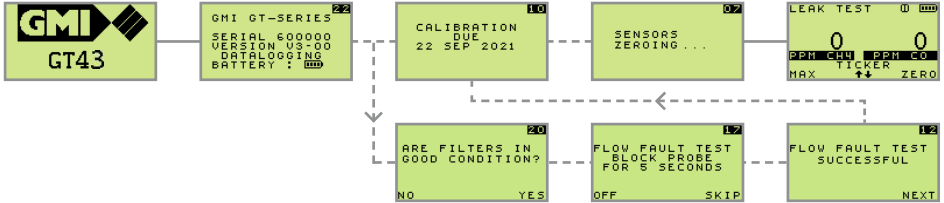


Switch Off




Mode Selection

e.g. Confined Space

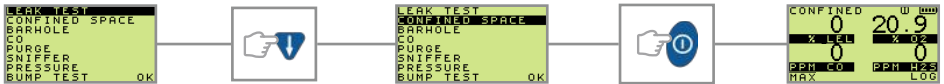

Pump On / Off


Not Confined Space or Pressure

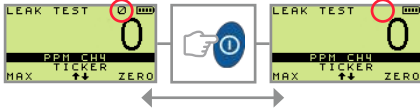

Invert Display



Clear Flow Fault

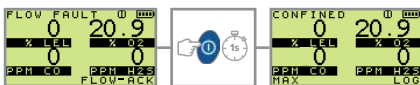


Change Range

Leak Test or Purge




Max / Min

Leak Test & Confined Space

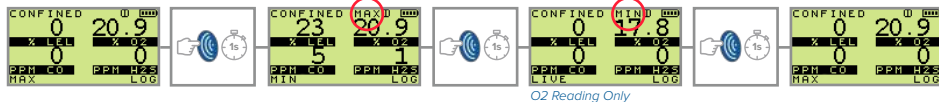


Acknowledge Alarm

Leak Test & Confined Space

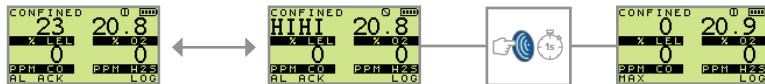


Zeroing

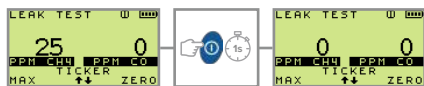


Manual Log

Confined Space & CO

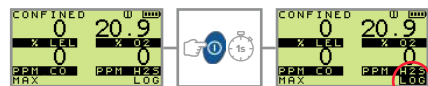

Barhole

e.g. Timed

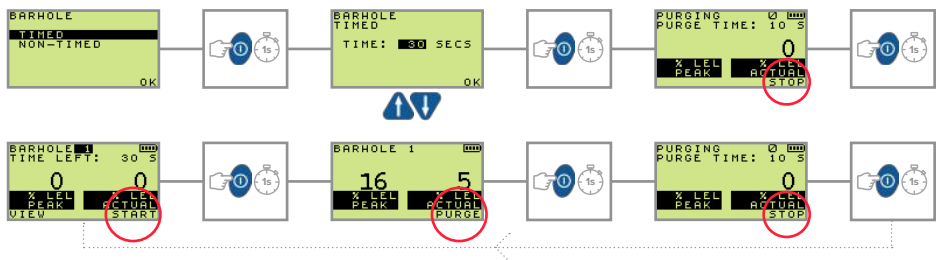

Backlight / Flashlight

