



DESCRIPTION

PRESSURE OPERATION

THE VALVE OPENS WHEN PRESSURE IS APPLIED TO THE PILOT PORT. PILOT PRESSURE ENTERING THE INLET PORT DEPRESSES THE ACTUATING PISTON AND THE VALVE IS OPENED. WHEN THE PISTON IS AT THE BOTTOM OF ITS STROKE AN OUTLET PORT IS UNCOVERED AND THE PILOT PRESSURE CAN BE CONVEYED TO THE CYLINDER VALVE PRESSURE ACTUATORS WHICH THEN DISCHARGE MAIN CO₂ FROM THE CYLINDER BANK. THE VALVE REMAINS OPEN UNTIL PILOT PRESSURE IS REMOVED.

MANUAL OPERATION

THE VALVE CAN BE OPENED MANUALLY BY OPERATING THE LEVER. THE MANUAL LEVER IS SECURED IN ITS NORMAL POSITION (VALVE SHUT) BY A SAFETY PIN, WHICH MUST THEN BE REMOVED BEFORE OPERATING THE LEVER. THE VALVE CAN BE OPENED WHILE SUBJECTED TO MAIN CO₂ PRESSURE.

TEST PRESSURE

232 BAR

WEIGHT

17 Kg(37lbs)

2" P.O.D Valve with indicator switch
Part No K24632

PED 97/23/EC CLASSIFICATION S.E.P.

sales@norrscope.com

ALL DIMENSIONS IN mm's UNLESS OTHERWISE STATED

REV	DATE	REASON FOR ISSUE	APP
1	29.05.12	ORIGINAL ISSUE	